



Adapter NPT



Ordering Information	T NPT(F)	T1 NPT(M)	L		D Min. Opening		W Hex. Flat
	inch	inch	inch	mm	inch	mm	inch
SS-VAD-F2-M1	1/8	1/16	1.09	27.7	0.12	3.0	9/16
SS-VAD-F2-M2	1/8	1/8	1.10	27.9	0.19	4.8	9/16
SS-VAD-F4-M2	1/4	1/8	1.26	32.0	0.19	4.8	3/4
SS-VAD-F4-M4	1/4	1/4	1.40	35.6	0.28	7.1	3/4
SS-VAD-F6-M2	3/8	1/8	1.33	33.8	0.19	4.8	7/8
SS-VAD-F6-M4	3/8	1/4	1.50	38.1	0.28	7.1	7/8
SS-VAD-F6-M6	3/8	3/8	1.51	38.4	0.38	9.6	7/8
SS-VAD-F8-M2	1/2	1/8	1.58	40.1	0.19	4.8	1-1/16
SS-VAD-F8-M4	1/2	1/4	1.76	44.7	0.28	7.1	1-1/16
SS-VAD-F8-M6	1/2	3/8	1.75	44.5	0.37	9.5	1-1/16
SS-VAD-F8-M8	1/2	1/2	1.94	49.3	0.47	11.9	1-1/16
SS-VAD-F12-M4	3/4	1/4	1.85	47.0	0.28	7.1	1-5/16
SS-VAD-F12-M6	3/4	3/8	1.82	46.2	0.37	9.5	1-5/16
SS-VAD-F12-M8	3/4	1/2	2.02	51.3	0.47	11.9	1-5/16
SS-VAD-F12-M12	3/4	3/4	2.02	51.3	0.62	15.8	1-5/16
SS-VAD-F16-M4	1	1/4	1.96	49.8	0.28	7.1	1-5/8
SS-VAD-F16-M8	1	1/2	2.16	54.9	0.47	11.9	1-5/8
SS-VAD-F16-M12	1	3/4	2.17	55.1	0.62	15.7	1-5/8
SS-VAD-F16-M16	1	1	2.28	57.9	0.86	21.8	1-5/8

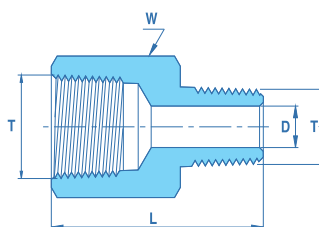


Adapter NPT To BSPP

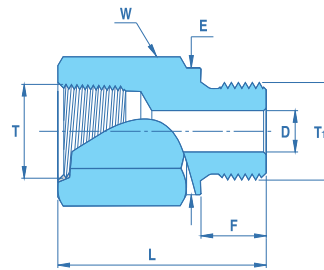

Ordering Information	T NPT(F)	T1 BSPP(M)	L		F		E Dia.		D Min. Opening		W Hex. Flat
	inch	inch	inch	mm	inch	mm	inch	mm	inch	mm	inch
SS-VAD-F2-MG2	1/8	1/8-28	0.99	25.1	0.28	7.1	0.54	13.8	0.16	4.1	9/16
SS-VAD-F4-MG4	1/4	1/4-19	1.32	33.5	0.44	11.2	0.70	18.0	0.23	5.8	3/4
SS-VAD-F6-MG6	3/8	3/8-19	1.41	35.8	0.44	11.2	0.85	21.8	0.31	7.9	7/8
SS-VAD-F8-MG8	1/2	1/2-14	1.74	44.2	0.56	14.2	1.02	26.0	0.47	11.9	1-1/16
SS-VAD-F12-MG12	3/4	3/4-14	1.89	48.0	0.62	15.7	1.26	32.0	0.62	15.7	1-5/16
SS-VAD-F16-MG16	1	1-11	2.10	53.3	0.72	18.3	1.53	39.0	0.78	19.8	1-5/8

Adapter NPT To BSPT

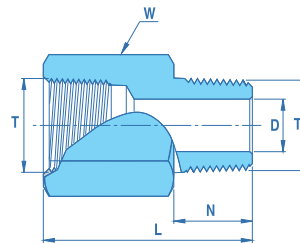


Ordering Information	T NPT(F)	T1 BSPT(F)	L		N		D Min. Opening		W Hex. Flat
	inch	inch	inch	mm	inch	mm	inch	mm	inch
SS-VAD-F2-MR2	1/8	1/8-28	1.09	27.7	0.38	9.7	0.19	4.8	9/16
SS-VAD-F4-MR4	1/4	1/4-19	1.42	36.1	0.56	14.2	0.28	7.1	3/4
SS-VAD-F6-MR6	3/8	3/8-19	1.50	38.1	0.56	14.2	0.38	9.6	7/8
SS-VAD-F8-MR8	1/2	1/2-14	1.94	49.3	0.75	19.0	0.47	11.9	1-1/16
SS-VAD-F12-MR12	3/4	3/4-14	2.02	51.3	0.75	19.0	0.62	15.8	1-5/16
SS-VAD-F16-MR16	1	1-11	2.30	58.4	0.94	23.9	0.88	22.4	1-5/8




Dimensions are for reference only and are subject to change without prior notice

Adapter NPT To SAE / MS

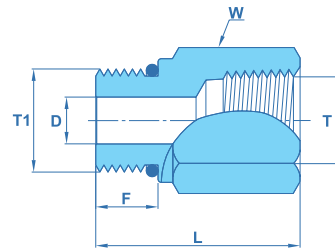


Ordering Information	T NPT(F)	T1 Straight Thread UN	D		L		F		W Hex. Flat
	inch	inch	inch	mm	inch	mm	inch	mm	inch
SS-VAD-F4-MA4	1/4	7/16-20	0.20	5.1	1.32	33.5	0.36	9.1	3/4
SS-VAD-F6-MA6	3/8	9/16-18	0.28	7.1	1.39	35.3	0.39	9.9	15/16
SS-VAD-F8-MA8	1/2	3/4-16	0.42	10.7	1.76	44.7	0.44	11.2	1-1/16
SS-VAD-F12-MA12	3/4	1-1/16-12	0.66	16.7	1.99	50.5	0.59	15.0	1-3/8
SS-VAD-F16-MA16	1	1-5/16-12	0.88	22.3	2.12	53.8	0.59	15.0	1-5/8

Adapter BSPT To NPT

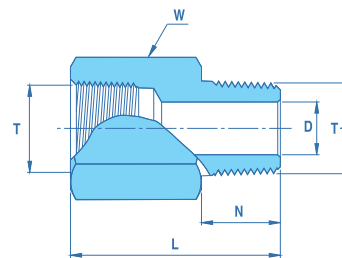

Ordering Information	T BSPT(F)	T1 NPT(M)	L		N		D Min. Opening		W Hex. Flat
	inch	inch	inch	mm	inch	mm	inch	mm	inch
SS-VAD-FR4-M4	1/4-19	1/4	1.43	36.3	0.56	14.2	0.28	7.1	3/4
SS-VAD-FR6-M6	3/8-19	3/8	1.51	38.4	0.56	14.2	0.38	9.6	7/8
SS-VAD-FR8-M8	1/2-14	1/2	1.96	49.8	0.75	19.0	0.47	11.9	1-1/16

Adapter Adapter BSPP To NPT

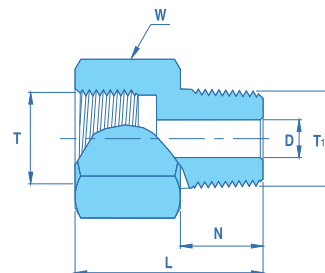

Ordering Information	T BSPP(F)	T1 NPT(M)	L		N		D Min. Opening		W Hex. Flat
	inch	inch	inch	mm	inch	mm	inch	mm	inch
SS-VAD-FG4-M4	1/4-19	1/4	1.19	30.2	0.56	14.2	0.22	5.6	3/4
SS-VAD-FG6-M6	3/8-19	3/8	1.27	32.3	0.56	14.2	0.26	6.6	15/16
SS-VAD-FG8-M8	1/2-14	1/2	1.65	41.9	0.75	19.0	0.28	7.1	1-1/16

